

1997_ALTAVOZ SKIND


FRONT PART

1997 - Altavoz Skind Manual de instrucciones (Esp)



Recomendamos que lea detenidamente este manual de instrucciones y lo conserve para futuras consultas.

Descripción del Producto:

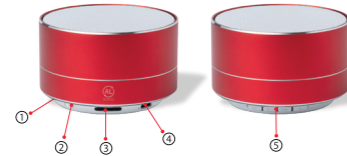

1. Micrófono
2. Botón encendido/apagado
3. Tarjeta Micro SD
4. Entrada Micro USB
5. Controles

Especificaciones:

- Versión Bluetooth 5.0
- Voltaje de carga: 5V
- Batería de Litio 450mAh, 3.7V
- Tiempo en funcionamiento: 4-5h
- Distancia de funcionamiento: Hasta 10 metros
- Frecuencia: 280Hz-16KHz
- Impedancia: 4 Ω
- Potencia: 3W
- THD: menos del 10%
- SNR: >65dB
- Soporta Tarjetas Micro SD de hasta 64GB

Funcionamiento:

Sitúe el botón de encendido en la posición ON para encender el altavoz. La luz indicadora en color azul comenzará a parpadear, lo que indica que el dispositivo está listo para ser emparejado.

Sitúe el botón de encendido en la posición OFF para apagar el altavoz.

Reproducir música via Bluetooth:

Desde el menú Bluetooth de su dispositivo, busque nuevos dispositivos y seleccione "1997" para asociarlo a su teléfono. Una vez asociados correctamente, oírás un sonido de confirmación y la luz indicadora permanecerá fija.

Reproducir música desde la tarjeta micro SD:

Inserte una tarjeta Micro SD en la ranura correspondiente y el altavoz reproducirá automáticamente la música de la misma.

Radio FM:

Inserte el cable Micro USB en el puerto Micro USB del altavoz, el cual funcionará como antena. Pulse un segundo y el altavoz buscará automáticamente las emisoras de radio disponibles. Pulse <> para cambiar de emisora.

Carga:

Conecte el dispositivo a una fuente de alimentación adecuada utilizando el cable suministrado.

Durante el proceso de carga, el indicador luminoso en color rojo permanecerá encendido. Cuando el proceso de carga haya finalizado, el indicador LED se apagará.

Controles:

>	<ul style="list-style-type: none"> • Pulse una vez para pasar a la siguiente pista. • Mantenga pulsado para subir el volumen. (Oírás un sonido de confirmación cuando se alcance el máximo)
<	<ul style="list-style-type: none"> • Pulse una vez para retroceder a la pista anterior. • Mantenga pulsado para bajar el volumen.
	<ul style="list-style-type: none"> • Pulse una vez para responder/coger una llamada. • Pulse una vez para reproducir/pausar la música. • Pulse dos veces para rechazar una llamada. • Pulse dos veces para marcar el número de la última llamada.
M	<ul style="list-style-type: none"> • Pulse para cambiar de función (Bluetooth / FM Radio / Tarjeta Micro SD).

Solución de problemas:

Fallo	Solución
Imposible conectarse a otros dispositivos.	<ol style="list-style-type: none"> 1. Revise si el altavoz sigue en el proceso de búsqueda. Apáguelo y encéndalo nuevamente. 2. Hay demasiados dispositivos Bluetooth alrededor que causan dificultad en la conexión. Por favor desconéctelos. 3. Asegúrese de que está en "modo asociación".
El sonido es bajo o distorsionado.	<ol style="list-style-type: none"> 4. Revise el volumen de su dispositivo y ajústelo a un nivel adecuado. 5. Recargar la batería.
La música se detiene de vez en cuando.	<ol style="list-style-type: none"> 6. Revise si la distancia efectiva de transmisión del altavoz es excedida o si existe algún obstáculo entre el altavoz y el dispositivo Bluetooth.

Advertencias:

1. No lo exponga a la lluvia o entornos mojados.
2. Evite caídas que le puedan generar daños serios.
3. No intente reparar la unidad por sí mismo, contacte con un especialista.
4. Para evitar riesgos, no se deshaga de él de manera inapropiada ya que posee una batería de litio integrada.
5. Limpíelo con un trapo seco.
6. No lo instale cerca de fuentes de calor o luz solar directa.
7. No inserte ningún objeto metálico en la unidad, existiría la posibilidad de un cortocircuito.
8. Mantenga fuera del alcance de los niños.



El símbolo de referencia tanto en el producto como en su manual de usuario, indica que al final de la vida útil de los aparatos eléctricos y/o electrónicos, éstos deberán reciclarse por separado de sus residuos domésticos. Existen medios adecuados para recoger este tipo de material para su correcto reciclaje.

Para obtener más información, póngase en contacto con la autoridad local. Por la presente, Mikto Catal Importaciones S.L. declara que este equipo radioeléctrico es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en: www.makito.es (busque por referencia).

MKTO CATAL IMPORTACIONES S.L., B04267225
Ctra. de Huércal-Overa, s/n, 04640, Pulpi, Almería, Spain.


BACK PART

1997 - Speaker Skind User Manual (Eng)



It is recommended to read this user manual carefully and keep it for future reference.

Product Overview:

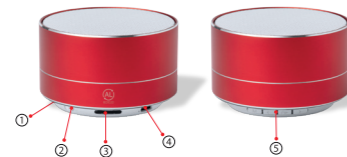

1. Microphone
2. ON/OFF Button
3. Micro SD Card Slot
4. Micro USB Input
5. Controls

Specifications:

- Bluetooth version 5.0
- Charging voltage: 5V
- Lithium battery 450mAh 3.7V
- Working Time: 4-5h
- Operating distance: up to 10 meters
- Frequency: 280Hz-16KHz
- Impedance: 4 Ω
- Power output: 3W
- THD: less than 10%
- SNR: >65dB
- Micro SD card: up to 64GB

Operation:

Switch the power button to ON position to power on the speaker. The blue light indicator will start to blink showing that it's ready to be paired.

Switch the power button to the OFF position to power off the speaker.

Playing Music via Bluetooth:

From the Bluetooth menu of your device, search for new devices and select "1997" to pair. Once they are paired successfully, you will hear a notification sound and the indicator light will keep fixed.

Playing Music via Micro SD Card:

When you insert a micro SD card into the micro SD card, the music will automatically start playing.

FM Radio:

Connect the Micro USB cable into the Micro USB port to work as an antenna. Press for a second and the speaker will automatically search for radio channels. Short press <> to change the channel.

Charging:

Connect the charger to an appropriate power source using the supplied cable.

During charging, the red indicator light will stay on. When the speaker is fully charged the indicator light will turn off.

Controls:

>	<ul style="list-style-type: none"> • Short-press the button to next song. • Long-press the button to increase the volume. (When max volume is reached you will hear a notification sound)
<	<ul style="list-style-type: none"> • Short-press the button to previous song. • Long-press the button to decrease the volume.
	<ul style="list-style-type: none"> • Short-press the button to answer/end a call. • Short-press the button to play/pause the music. • Press twice the button to reject an incoming call. • Press twice the button to redial the last phone number.
M	<ul style="list-style-type: none"> • Short press to change the function (Bluetooth / FM Radio / Micro SD card).

Troubleshooting:

Fault	Solution
Unable to pair with other devices.	<ol style="list-style-type: none"> 1. Check whether the speaker is still in the process of search or switch it off and on again. 2. There are too many Bluetooth devices in the proximity that cause difficulty in connection. Turn off other Bluetooth devices. 3. Make sure your device is in "Pairing Mode".
The sound is low or distorted.	<ol style="list-style-type: none"> 4. Check the Bluetooth device volume and then adjust it to an appropriate level. 5. Recharge the battery.
Occasionally the music stops.	<ol style="list-style-type: none"> 6. Check whether the speaker effective transmission range is exceeded or if there is an obstacle between the speaker and other Bluetooth devices.

Warnings:

1. Do not expose this product to rain or damp conditions.
2. Prevent this item from falling as it could cause serious damage.
3. Do not dismantle, repair or modify this product by yourself, contact an authorized specialist.
4. In order to avoid any risk, do not dispose of this product inappropriately as there is a built-in Lithium battery.
5. Clean the speaker with a dry cloth.
6. Do not place this item near sources of heat or expose to direct sunlight.
7. Do not insert any metal objects into this device as there is a risk of causing a short circuit in the unit.
8. Keep out of reach of children.



This symbol both in the product and its user manual indicates that at the end of the devices electrical life, it should be recycled separately from your household waste. There are adequate means to dispose of this material for proper recycling. For more information, contact your local authorities.

Hereby, Mikto Catal Importaciones S.L. declares that this radio equipment is in compliance with Directive 2014/53/EU. The full text of the UE declaration of conformity is available at: www.makito.eu (search on reference).

MKTO CATAL IMPORTACIONES S.L., B04267225
Ctra. de Huércal-Overa, s/n, 04640, Pulpi, Almería, Spain.